


GLASS FRONT VERSATILE CASCADE MERCHANDISER

INSTRUCTION MANUAL

MODEL: VM3, VM4, VM5-AMBIENT

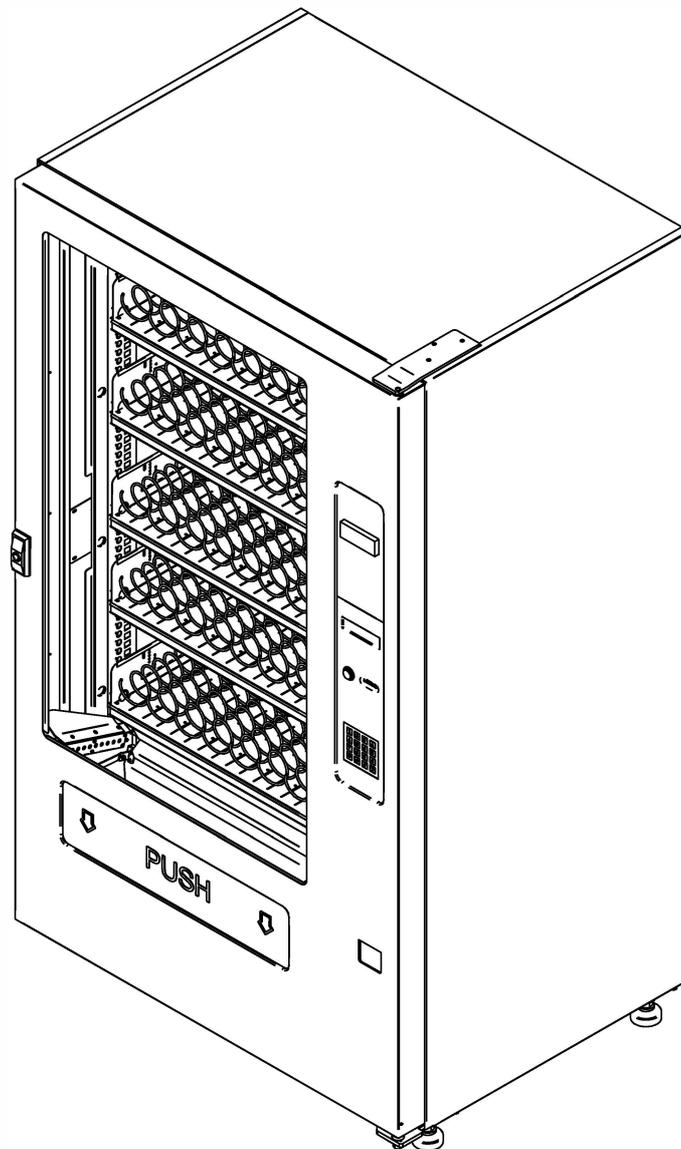

CONTENTS

1.0 DESCRIPTION.....	1
2.0 INSTALLATION.....	2
3.0 LOADING OF PRODUCT.....	3
4.0 COINAGE.....	5
5.0 REFRIGERATION.....	5
6.0 PROGRAMMING.....	6
6.1 MANUAL TUBE FILLING(FILL COIN).....	8
6.2 PRICE SETTING (SET PRICE).....	8
6.3 SINGLE MOTOR TEST (SINGLE SELECTION).....	9
6.4 TEST ALL MOTORS (ALL SELECTION).....	9
6.5 ACCOUNTABILITY (ACCOUNT).....	9
6.6 VEND OPTIONS (OPTIONS PUSH[#]).....	10
7.0 CLEANING.....	25
8.0 MAINTAINANCE.....	26
9.0 NOISE.....	26
10.0 RESTRICTIONS OF USE.....	26
11.0 IMPORTANT SAFEGUARDS.....	27
APPENDIX TROUBLESHOOTING.....	29

1.0 Description

This machine is a chilled spiral merchandiser. It has 6 trays – 3 or 4 snack spiral trays & 3 or 2 drink trays.

The machine's robust construction makes it ideal for many locations. The machine has superior insulation, a double glazed window. Meanwhile, it has two temperature compartment (top and bottom). It has no problem for the refrigeration to maintain temperatures for bottom 3 or 2 trays down to 8°C and for top 3 trays between 14°C and 25°C.)(when max ambient temperature is 40 °C)

For added safety an electrical cut out switch (RCD) is built in as standard.

Coinage systems and/or note validators are catered for by the MDB protocol and two board processor and output electronics with in built diagnostics.

All vend motors are 24 volt operation and spirals can be interchanged easily.

This machine is suitable for indoor and outdoor use.

Model	VS1-5000
Dimensions(W×D×H)	1045 X 785×1830(mm) / 41.2 X 30.8×72(in.)
Weight(N.W/G.W)	260Kg/290Kg / 561Ibs/625.7 Ibs
Max selections	60
Power Consumption	80W
Lighting (Optional)	12V DC LED Color corrected lighting system
Power Supply	AC 220V~240V 50Hz
Coinage system	M.D.B.
Air noise	Less than 60dB
Conditions of use	Ambient temp 0 ~ 40 °C Humidity 70% Not for dairy or perishable goods.


2.0 Installation

Remove all packing materials and dispose of correctly. Once the installation site has been chosen ensure that the machine is level and all four levelers touch the ground. Check that the door can be opened fully and the machine is stable and level.

MACHINE MAY MISS- VEND IF NOT LEVEL

Install the guided wind cover

We don't install the guided wind cover of the machine before leaving factory, because it is convenient for package and transportation. You should install it before the machine is put into service as the following:

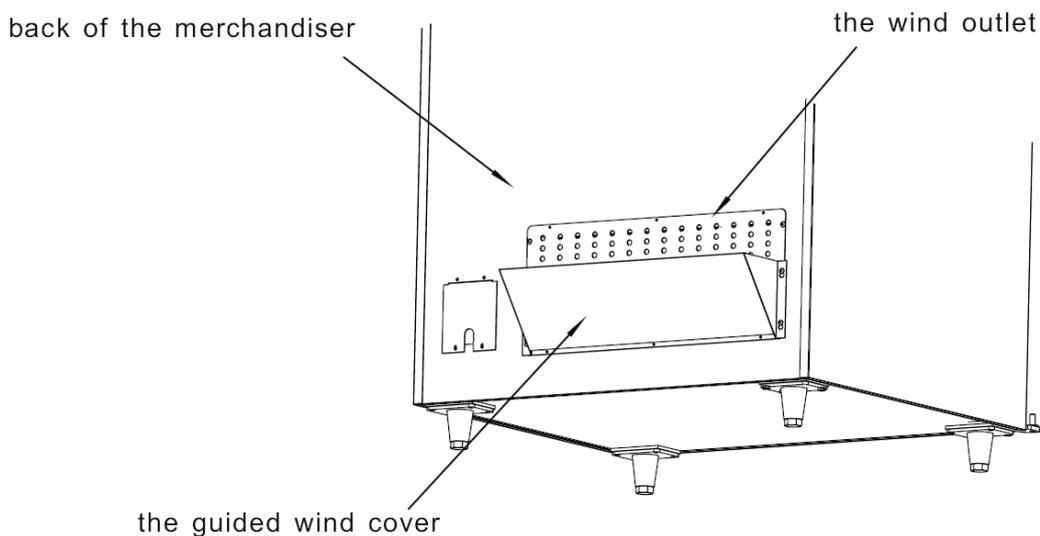

- 1) Open the door and take out the guided wind cover from the right small drawer of the merchandiser.
- 2) Loosen the lower four screws holding the wind outlet against the back of the cabinet.
- 3) Put the guided wind cover to the wind outlet align with the holes in the outlet and the cabinet.
- 4) Fasten the four screws

NOTE: Wear protective gloves when installing the guided wind cover to prevent injury.

Allow 300mm minimum between machine and the wall for air circulation and

refrigeration ventilation.

Ensure that a 220~240 volt AC, 13 Amps/ 110~130 volt AC, 26 Amps (based on your actual machine) earthed outlet is within 2 meters of the machine. This machine should not be used with an extension lead.

THIS MACHINE MUST BE EARTHED

Open door and power up machine. Switch on the circuit -breaker power switch. The lights, coin mech, LCD display and refrigeration system commence operation.

3.0 Loading of Product

This machines have 6 trays. The top 3 trays are for snack type/size items such as chips, chocolate, etc.. The bottom 3 trays are for drink type/size items as bottle or can.


To load a tray, with the door fully open, ride over the front tray rollers and pull forward. When the tray is fully forward it can be lowered to an angle making loading easier.

Ensure products are not too tight or too loose for the spiral. **Load products so they rest on the tray but not the spiral wire.** This helps to ensure correct delivery of product.

The machine is supplied with trays with spirals of different diameters and pitches.

To vary products' quantity or order, proceed as follows:


- 1) Open the main door.
- 2) Pull out the tray on which you are to change the spiral.
- 3) Switch off and take out the group motor-spiral.
- 4) Take out the spiral from the plastic support (lever between spiral and support) and replace with another spiral or with the another expeller motor group.
- 5) Fit up the new spiral group reversing the above operations. After having finished this operation, make sure that the end of the spiral is put on, otherwise modify the end, draw the spiral forward until the base of the spiral support will come out from the pit; then turn the spiral in the wished position and put it again into the pit.

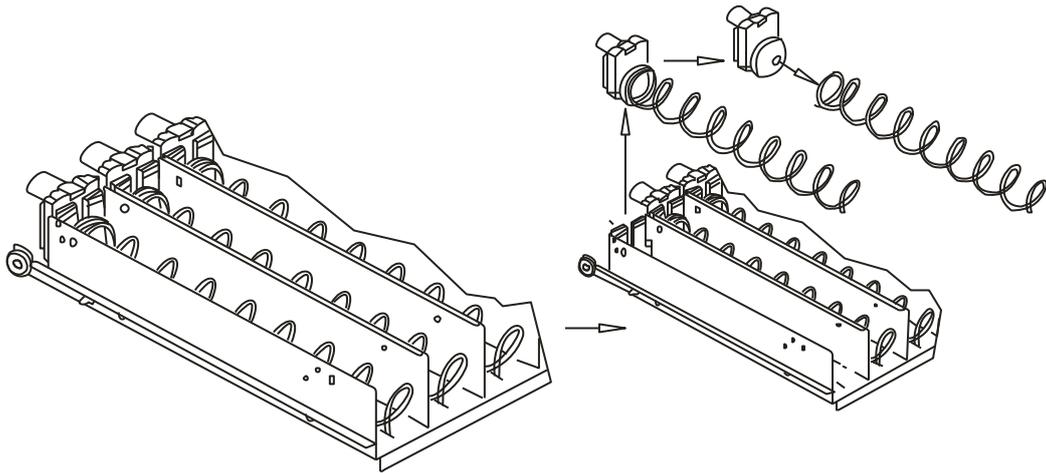

Located on the right hand side of the cabinet are four pull out drawers for storing any excess items. Although the drawers are outside the refrigerated part of the machine, due to the excellent insulation they are protected from high ambient temperatures.

Note: Please take care of your hand when you close the door.

Do not exceed the protective plate!!!

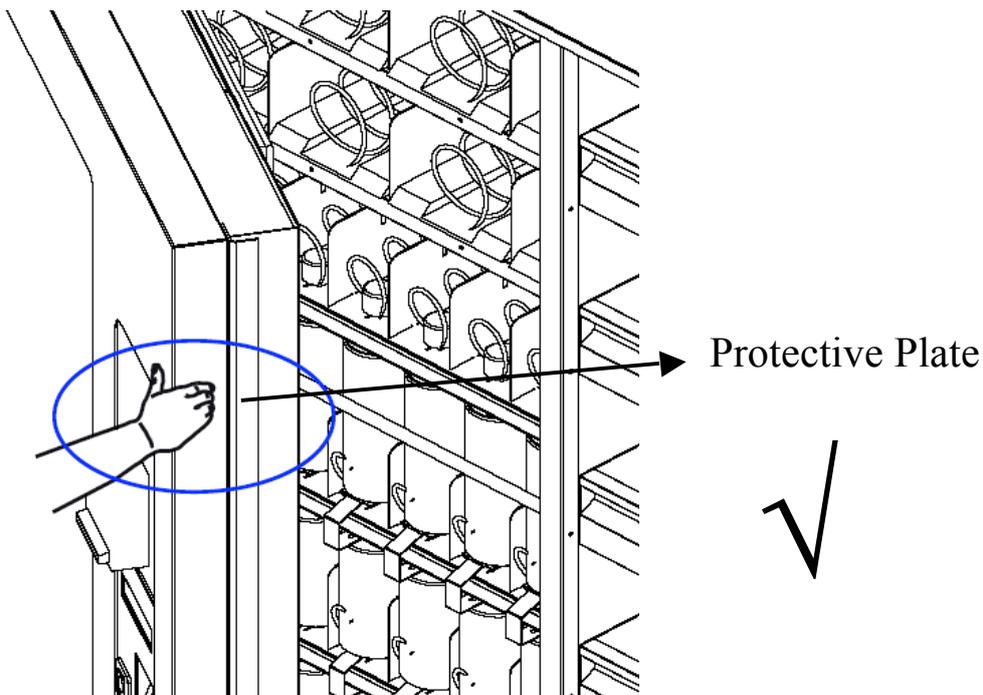



→ Protective Plate



4.0 Coinage

This machine uses **M**ulti **D**rop **B**us protocol for coinage and note validators.

5.0 Refrigeration

- 1) This system is an air conditioner. Care should be taken not to obstruct the rear air grille or to site the machine too close to a wall. Failure to observe these points may invalidate the refrigeration system warranty.
- 2) The refrigeration system is operated through the electronic control board. There are two temperature sensors in the cabinet: one control the current temperature, the other control the defrost temperature. When an unusual condition takes place and leads to the fact that the evaporator frosts, the sensor will send out a signal to the controller, then the controller in turn shut off the compressor through the relay.
- 3) If the temperature is above the setting that has been programmed in by the user, the controller sends a signal to the refrigeration relay. The energized relay closes to complete the high voltage circuit that powers the compressor and the condenser fan.
- 4) If the compressor should overheat, a thermal overload removes power to the compressor until it is cooled.

5) When the temperature in the cabinet reaches 8°C (the temperature setting), the controller de-energizes the relay, which in turn breaks the circuit powering the compressor.

6) The controller will also shut off the compressor if the door is opened. This is to prevent the refrigeration unit from freezing up.

After the compressor shut down, the controller will wait until the compressor has been shut down for 3 minutes and if applicable, the door has been closed for 1 minute before restarting the compressor. The delay allows pressure in the system to equalize.

Note: The refrigeration system is pressurized and sealed at the factory. Puncturing or cutting any component in the system will cause refrigerant gas and liquid to be propelled out of the system, and may create an immediate physical hazard. Use caution to avoid accidentally opening the refrigerant system.

It should also be **noted** that releasing refrigerant to the atmosphere is a federal crime and is punishable by law. Any service work requiring the system to be opened must be performed by a licensed technician using certified equipment. Unauthorized service to the sealed refrigerant system may void the warranty.

- 1) Never puncture or cut any component in the refrigeration system.
- 2) Always use licensed service technicians to service the refrigeration system.
- 3) Always wear hand and eye protection when servicing the vendor.

The temperature is factory set for optimum performance.

6.0 Programming

The service mode can be entered by pressing the blue "mode" button located on the component side of the main control board. The controller automatically returns to the sales mode if the door is closed. If credit exists before entering the service mode, it will be restored when the sales mode is re-invoked.


When opening the door, the MDB machine (coin mechanism and bill acceptor or card reader) will be inhibited by vending machine. Beep will be made to alarm the operator. At the same time, display will show "Warning: the door is

open". After 2 seconds beep will stop, and only those motors not home , null or jammed will run. The number of the selected motor will be displayed when it is tested. After a motor's running, an error message ' ** (the number of motor)Timeout! ' or ' ** Lost! ' will show if any motors are still jammed or not home. If any motors are still null, ' ** Null ' will show. Otherwise it will show ' ** OK! ' . If those motors are all reset, the test will be finished.

After motor's reset, the machine will be diagnosed automatically. It will display the current status of the controller and peripherals. Checking is carried out in the order of changer, bill validator, card reader and vending machine controller. The display will show in this order: "Changer", "Validator", "Reader", and "VMC". If no problems are found with the individual device then the name of the device will be followed by "OK". If problems are found then the device name will be followed by an error code. A definition of all possible error codes is shown in 6.6.16.

Pressing the mode button once to enter the service mode, the transition and the display will indicate the first service menu item as "#SERVICE MODE# Pls Press Enter".

NOTE: If the control board need to be replaced for some reasons, all motors must be tested after the new control board is installed. In this way the motor can be reset when the door open.

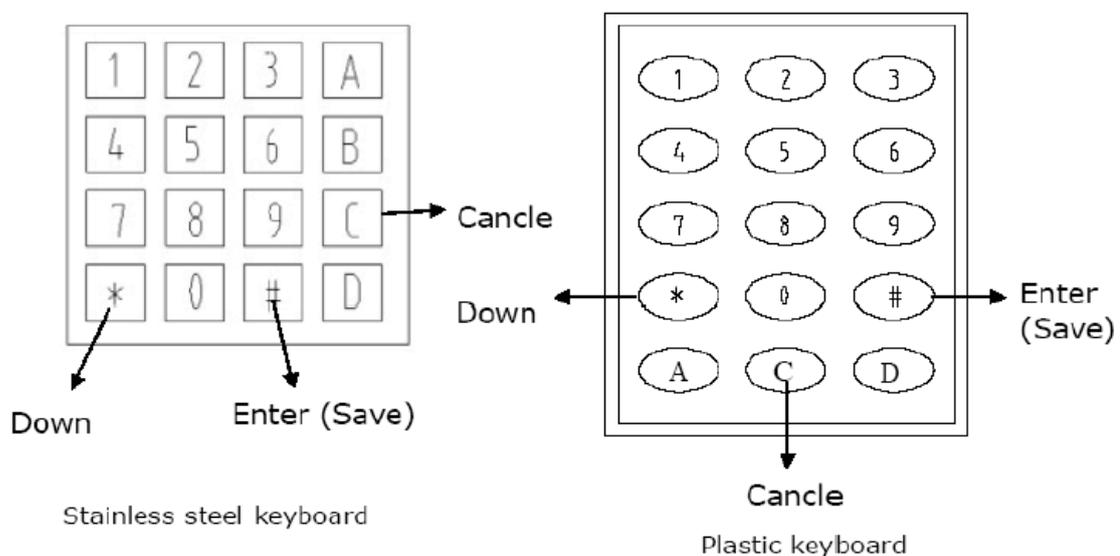

The operator navigates the service menu by using above 3 function buttons. The "*" button may be thought of as a "Down" button. For entering into a given menu item, the user should press the "#" button. It's easy to think of this "#" button as the "Enter" button. To cancel navigation within a menu item and return to the previous level, the user should press the "C" button. This button may be thought of as the "Cancel" button. At specific points in the menu the user is given the option of saving a setting. A press of the "#" button has another effect as the "Save" button. For the purpose of simplifying the service mode instructions, the following will introduce details and emphasize their navigation purpose within the service menu.

6.1 Manual Tube Filling (Fill Coins)

This provides functions of manually filling and dispensing coins for the changer. This function is started by pressing "#" after the user entering the menu item labeled "Fill coins". At this time, the operator may begin inserting coins into the changer. When coins enter, display will show the total value of the coins entered as "Cash *(present sum of coin the operator inserted in), Change *(present available change coin of the coin mechanism)"

6.2 Price Setting (Set Price)

This menu provides functions that allow the operator to set prices for individual selections. Pressing "*" button when it displays "Fill Coins", the menu item will label "Set Price".

Press "#" to enter the menu. Select which set of prices you wish to change. Enter the selection. This can include * as a wildcard.

eg.

1* - set all items on tray 1 to the same price

** - set all items in the machine to the same price

To set the price of a single selection the user should enter the number of the selection by the keyboard. Then it will display "Select ** (the number of selection the user have entered)", next the user should enter the price of the selection by the keyboard. If the operator is satisfied, the "#" button should be

pressed to proceed with the current price setting. If the operator is not satisfied with the selection(s) or if he/she wants to exit the menu then the "C" button should be pressed and it will return to the previous menu.

6.3 Single Motor Test (Single Selection)

This menu provides functions that allow the operator to test the operation of individual motors. After pressing "*" button when it displays "Set Price", the menu item will labels "Single Selection".

Upon entering into the function, the display will show "Select ** ".To test a single motor the user should enter the required selection number by the keyboard. Then it will display"** (the number of motor the user entered) Testing". If the motor is working,"** OK" will be showed, otherwise "** Error" will be showed. If the motor does not exist "** (the number of motor) Null" will be showed. To exit the menu please press "C" button.

6.4 Test all Motors (All Selection)

This menu provides functions that allow the operator to test the operation of all motors. After pressing "*"button when it displays "Single Selection", the menu item will labels "All Selection".

Upon entering into the function, if any motor is not working, "** (the number of motor that has error) Error!" will be showed. If the motor does not exist "** (the number of motor) Null" will be showed, then go on to the next motor test. If all motors are working, "All OK" will be showed. To exit the menu please press "C" button.

6.5 Accountability (Account)

This menu provides functions of displaying the stored accountability. After pressing "*"button when it displays "All Selection", the menu item will labels "Account". To enter it please press the "#" button. To exit this menu or any of the functions within this menu, the "C" button should be pressed.

6.5.1 Historical Sales (Hist Sales)

Display value of all paid sales since initialization.

6.5.2 Historical Count (Hist Count)

Display total number of products vended since initialization.

6.5.3 Resettable Sales (Res Sales)

Display value of all paid sales since the last reset.

6.5.4 Resettable Count(Res Count)

Displays total number of products vended since the last reset.

6.5.5 Card Reader Sales (Card Sales)

Display value of total card reader sales since initialization.

6.5.6 Resettable Card Count(Res Card)

Display value of all card sales since the last reset

6.5.7 Defined Sale Account (Single Account)

This allows the user to set a single product that will be tracked for accounting purposes. Once enter this menu item, the user will see a display as "Select **". The user can set the product number, then it will display total number of products vended of the chosen product since the last reset.

6.5.8 Clear all Resettable Fields (Clear)

This function allows the user to set all resettable fields to 0.

Upon entering this function, those resettable items will be cleared and the display will show "Finished!".

6.6 Vend Options (Options Push [#])

This menu provides functions that allow the operator to control a variety of vending options. After pressing "*"button when it displays "Account", the menu item will labels "Options Push[#]". Pressing the "#" button to enter it. To exit this menu or any of the functions or submenus within this menu, the "C" button should be pressed. Press"#" button to enter the following functions.

6.6.1 Force Vending (Force Vend)

This option will force the customer to complete a purchase once they deposit

money of any form. If a vend is attempted on a configured selection and the motor fails during this vend, the customer will be allowed to escrow the credit, regardless of the force vend status.

Upon entering this function the display will show the current on/off state as "ON" or "OFF ". Pressing "#" will allow to enter into the edit mode, then press the "*" button to switch the on/off state. At last the user should press "#" again to save the conversion. At any time, the function may be exited by pressing "C" button.

6.6.2 Multiple Vending (Multi Vend)

This option will allow the customer to purchase more than one product if enough credit has been deposited. When this function is active, any remaining credit after a vend will not automatically be returned. At this time, the customer has the option of:

- 1) Making another selection if there's enough credit;
- 2) Depositing more money;
- 3) Escrowing the remaining credit.

If force vend is active, the customer will be forced to attempt the purchase of at least one valid (the selection is in configuration) item. If a vend is attempted on a configured selection and the motor fails during this vend, the customer will be allowed to escrow the credit, regardless of the force vend status.

Upon entering this function the display will show the current on/off state as "ON" or "OFF ". Pressing "#" will allow to enter into the edit mode, then press the "*" button to switch the on/off state. At last the user should press "#" again to save the conversion. At any time, the function may be exited by pressing "C" button.

6.6.3 Free Vending (Free Vend)

This menu allows free products to be given to the customer. Every product will be vended at no cost. When the status is "ON", the payment system (coin mechanism and bill acceptor or card reader) will be inhibited by vending machine. Upon entering this function the display will show the current on/off

state as "ON" or "OFF ". Pressing "#" will allow to enter into the edit mode, then press the "*"button to switch the on/off state. At last the user should press "#" again to save the conversion. At any time, the function may be exited by pressing "C" button.

6.6.4 Test Vending (Vend Test)

This menu provides functions that allow the operator to test vending whether to be recorded or not. Press the "#" button after the user has navigated to the menu item labeled "Vend Test" to enter it. The display will show "ON "or "OFF". This initial ON/OFF status indicates if the corresponding control is active or inactive. Pressing "#" will allow to enter into the edit mode, then press the "*"button to switch the on/off state. At last the user should press "#" again to save the conversion. At any time, the function may be exited by pressing "C" button.

6.6.5 Escrow the Bill (Bill Escrow)

This menu provides functions that allow the last bill accepted in the escrow position no matter to be returned or not. When this function is active and the bill acceptor offers escrow, bill acceptance is disabled if the accumulated credit is greater than or equal to the maximum price (or twice the maximum price when multi vend is active). The bill will be kept in the escrow position, and it can be returned, otherwise the bill will go straight into the bill stacker.

Upon entering this function the display will show the current on/off state as "ON" or "OFF ". Pressing "#" will allow to enter into the edit mode, then press the "*"button to switch the on/off state. At last the user should press "#" again to save the conversion. At any time, the function may be exited by pressing "C" button.

6.6.6 Record of Last Sale(Sales Record)

This menu provides functions that allow the operator to read the latest sale record. The display will show "Credit***.** Card***.** Change***.** Selection**"(* refers to present value). This function may be exited by pressing "C" button.

6.6.7 Timed shut down intervals (Shutdown)

This option will allow the controller to shut down a range of selections or the entire machine based on four time of day intervals.

If the time falls within one of these intervals and the entire machine has been selected for shutdown then the customer lead through message "Vending Operation To Resume At hh.mm " is scrolled. If a range of selections has been chosen for shutdown that does not encompass the entire machine then the same message will scroll once for every time the customer makes a selection that falls within the range. For every day of the week these 4 time intervals may overlap one another. Pressing the "Enter" button after the user has navigated to the menu item labeled "Shutdown" accesses this option. Pressing the "Enter" button when any of the following functions are highlighted will pass control to that function.

To exit this menu or any of the functions within this menu without saving settings, the "Cancel" button should be pressed.

6.6.7.1 Shutdown on/off state

The current on/off state of the shutdown option will be displayed as "ON" or "OFF". A press of "Enter" will change the display to "ON " or "OFF" .

Pressing "Enter" again will toggle the on/off state. At any time the state may be stored and this function exited by pressing "Save".

6.6.7.2 Shutdown time (Set Time)

This function allows the start and stop times for shutdown to be programmed. Upon entry into this function, the display will show "Shutdown [1] Strt hh.mm". A new start time for this interval may be entered by pressing the numeric keys, these will be displayed as they are entered. To save, press "Save". Press "Down", the display will continue to "Shutdown [1] Stop hh.mm". A new stop time for this interval may be entered by pressing the numeric keys, these will be displayed as they are entered. To save, press "Save". Press "Down", the display will continue by increasing the leading "1" in the above examples to show the next shut down time. When all four intervals have been programmed

the controller will return to the previous level in the menu structure by press "Cancel".

6.6.7.3 Shutdown day (Set Day)

This function allows day designation for the 4 separate shutdown intervals. Upon entry, the display will show " DAY X ". "DAY" designates a 3-letter abbreviation corresponding to the day of the week and "X" is a 3-letter field representing the shutdown on/off state for the corresponding day. It will read either " ON" or "OFF". At this point, pressing "Down" will now scroll through the days of the week for the specified interval. If "Enter" is pressed, control passes to the On/off field. At this point, presses of "Down" will toggle the daily status for the specific interval between " ON" and "OFF". Pressing "Cancel" will return control to the "Day" field. At any point, pressing "Save" will store the current status and return control to the interval field. Note that presses of "Cancel" will only force exit from this function while control is in the interval field.

6.6.7.4 Shutdown range (Range)

This allows the operator to set the range of rows that will be affected when shut down is active. Once in this menu item, the user will see a display similar to " SR/ER 1/7". The user sets the first row in the range by selecting any letter (from "1" through "7"). The last row in the range may then be selected by entering any letter that is greater than or equal to the first row in the range ("1" through "7"). Once the 2 letters in the range are entered, the setting may be saved by pressing the "Save" button or canceled by pressing the "Cancel" button. Pressing either of these buttons forces exit from this submenu and returns control to the previous menu level.

6.6.8 Temperature Setting (Temperature)

This submenu allows the operator to activate and modify the controller's temperature control capabilities.

6.6.8.1 Temperature Units (Degree)

This function allows the operator to specify the units of measurement for

temperature displaying. The display will read either "Degree F" for Fahrenheit units or "Degree C" for Celsius units. Pressing "#" will allow to change the unit, then press the "*" button will switch the unit. At last the user should press "#" again to save the conversion. At any time, the function may be exited by pressing the "C" button.

6.6.8.2 Setting Cabinet Temperature (Cabinet Temp)

This function allows the user to set an ideal cabinet temperature.

Cabinet temperature setting can be done in the "Set/Pt" function. After entering this function the display will show "Set/Pt +008C ". Pressing "#" and then new temperature can be input by numeric keys. Pressing "#" can save the temperature. Pressing "C" button before "#" will exit the function without saving the new temperature.

After finish the cabinet temperature setting, the operator should press "*" to go the next menu to set the temperature return difference value.

"Delta 1" means that when the cabinet temperature exceeds the programmed temperature (seted cabinet temperature + "Delta 1"), the compressor will start to run. Pressing "#" then "Delta 1" can be entered by numeric keys. To store the temperature value, press "#" again after it is entered. Pressing the "C" button before "#" will exit the function without saving.

"Delta 2" means that if the cabinet temperature drops under the programmed temperature (seted cabinet temperature - "Delta 2"), the compressor will stop running. "Delta 2" can be entered through the same way as the setting of "Delta 1".

6.6.8.3 Setting Defrost Temperature (Set Defrost)

This function allows the user to set an ideal defrost temperature.

After entering this function the display will show "Temp 1 -004C". This means at this sensor temperature the defrost cycle will start. Press "#" and enter new temperature by numeric keys. To save the temperature please press "#" after entered. Pressing the "C" button before "#" will exit the function without saving the new temperature.

After finishing the setting of Temp 1, the operator should press "*" to enter

"Delay 1" to set the time.

When the defrost sensor temperature is under the Temp 1 for the time of Delay 1, the defrost cycle will start. Press "#" and enter new time by the numeric keys. To save the time please press "#" after entered. Pressing the "C" button before "#" will exit the function without saving the new time.

After finishing the setting of Delay 1, the operator should press "*" to enter "Temp 2". This means that at this sensor temperature the defrost cycle will stop. Press "#" and enter new temperature by numeric keys. To save the temperature please press "#" after entered. Pressing the "C" button before "#" will exit the function without saving the new temperature.

After finishing the setting of Temp 2, the operator should press "*" to enter "Delay 2" to set the time.

When the defrost sensor temperature exceeds the Temp 2 for the time of Delay 2, the defrost cycle will stop. Press "#" and enter new time by the numeric keys. To save the time please press "#" after entered. Pressing the "C" button before "#" will exit the function without saving the new time.

6.6.9 Set Time and Date (Date/Time)

This option will allow the operator to set time and date for timed operations. Upon entering this function, firstly press the "#" button, then the operator can set the date and time by the numeric keyboard. (Note: the current time of day is displayed in 24 hour format.) Then press "#" button again to save the setting.

After setting time and date, if the operator press "*" button, he/she can set the day from Sunday to Saturday. Firstly press the "#" button, then press "*" button to choose the specific day for the vending machine. Lastly press "#" button again to save the setting.

6.6.10 The Opening Time of Lamp (Set Lamp)

Upon entering this function, the display will show "Strt hh.mm". A start time for lamp may be entered by pressing "#" and then the numeric keys; these will be displayed as they are entered. To save, press "#" button again. The display will next show "Stop hh.mm". A stop time for lamp may be entered in the same

way.

6.6.11 Health and Safety (Health Guard)

"Health Guard" feature prevents the sale of food if the temperature inside the machine rises above the health safety temperature limits for cold food products for more than the time you set.

6.6.11.1 Health Guard State

Upon entering this function the display will show the current state for the sensor as "ON" or "OFF". Pressing "#" will allow to change the mode, then press the "*" button will switch the on/off state. At last the user should press "#" again to save the change. At any time, the function may be exited by pressing the "C" button.

6.6.11.2 Setting Health Guard Temperature

Health guard temperature can be set in the "Set/Pt" function. After entering this function the display will show "Set/Pt +0015C". Press "#" and then new temperature can be input by the numeric keys. To save the temperature please press "#" after input. Pressing the "C" button before "#" will exit the function without saving.

6.6.11.3 Setting Delay Time

After finish the temperature setting, the operator should press "*" to go to the next menu to set the delay time. "Delay 1" means that if the door is open, the start up of the health guard should be delayed by the demanded time. "Delay 2" means that if the cabinet temperature exceeds the programmed temperature for this period, the relevant rows will be prohibit selling. Press "#" and then the new time can be input by the numeric keys. To save the time please press "#" after input. Pressing the "C" button before "#" will exit the function without saving.

6.6.11.4 Health Guard Range

In the rows setting menu, the user will see a display similar to "SR/ER */*". Where "*" represents the rows to be set (row *...etc.). Press "#" and then new

rows can be input by the numeric keys. To store the rows, press "#" after both are entered. Pressing the "C" button before "#" will exit the function without saving the new rows.

6.6.12 Optical Sensor Control Options (Sensor Mode)

There are three optional modes: Disable, Home, and Drop.

Disable: the message 'Thank You' will show on the screen no matter there is a product fall down or not.

Note: If the optical sensor not be installed, the detect mode must be set to disable.

Home: If the product fails to vend on the first try, the spiral will automatically make up to one additional cycles in an attempt to vend the selection. If the product still fails to vend on the second try, message "Make Alternate Selection" will be displayed. During above process once there is a product detected, the message "Please Remove Your Product" "Thank You" will show on the screen.

Drop: If the product fails to vend, the spiral will run additional 1/6 cycle. If there is still no product be detected, another 1/6 circle will be turned. After that if the vend still fails, message "Make Alternate Selection" will be displayed. During above process once there is a product detected, the message "Please Remove Your Product" "Thank You" will show on the screen.

Upon entering this function, pressing "#" will enable the operator to enter into edit mode, then press the "*" button to switch the sensor mode. At last the user should press "#" again to save the conversion. At any time, the function may be exited by pressing the "C" button.

When it display "Make Alternate Selection", the vend will be considered a failure. The controller will prevent further attempts to vend the same selection. That motor can not be vended until it is successful tested after 'Motor Reset' or 'Single motor test'. (The 'Motor Reset' function is performed automatically after open the door, the 'Single motor test' is in the service mode.) If some motors are failure, you can still choose anything else.

If the sale fails three continuous time under 'Home' mode or 'Drop' mode, the sensor will be considered has fault, the sensor mode will automatically turn into 'Disable' mode. Once open the door, the display will show " Diagnose : VMC 8 Error". If you set the mode to "Drop" or "Home", only if there is a successful vend, the count of failed sale will be cleared. Otherwise the sensor mode will be changed afresh to "Disable".

6.6.13 Discount setting (Discount)

This option will allow the controller to discount specific items in the machine at preprogrammed intervals. Pressing the "#" button after the user has navigated to the menu item labeled "Discount" to enter it. To exit this menu or any of the functions or submenus within this menu, the "Cancel" button should be pressed.

6.6.13.1 Discounting state (Discount)

Upon entering this function the display will show the current on/off state as "ON" or "OFF ". Pressing "#" will allow to change the mode, then press the "*" button will switch the on/off state. At last the user should press " #" again to save the conversion. At any time, the function may be exited by pressing the "Cancel" button.

After finish the setting on/off state, the operator should press "*" to enter the next menu to set the start and stop times for discounting to be programmed. Upon entry into this function, the display will show " Strt hh.mm". A new start time for this interval may be entered by pressing "#" and then the numeric keys; these will be displayed as they are entered.

To save, press "#"button again.

The display will continue to " Stop hh.mm" if press "*" button again. A new stop time for this interval may be entered through the same method used for the start time.

When the stop time has been programmed the controller press "*" button it will display "SR/ER */*". Where "*" represent the rows to be programmed (row *...etc.). Pressing "#" and then the numeric keys may enter new rows.

To store the rows, press "#" after both entries are entered. Pressing the "Cancel" button before "#" will exit the function without storing the new rows.

After functions of above have finished the controller should press "*" to enter "Value" to set the discount value that will be applied to those items that qualify for a discount. If want to enter the discount value, firstly operator should press the "#" button, then using the numeric keys a value up to 5 digits may now be entered. At any time this value may be saved with a press of the "#" key again.

6.6.13.2 Discounting day (Set Day)

This function allows the user to specify those days of the week in which discounting will apply. Upon entry, the display will show "DAY X". "DAY" designates a 3-letter abbreviation corresponding to the day of the week and "X" is a 3-letter field representing the discounting on/off state for the corresponding day. It will read either "ON" or "OFF". Pressing "*" button will scroll through the days of the week. Pressing "#" will allow to change the mode of On/off field for the corresponding day, then press the "*" button will switch the on/off state. At last the user should press "#" again to save the conversion. Note that presses of the "Cancel" button will only force exit from this function while control is in the "Day" field.

6.6.14 The Mode of Refrigeration (Refrigeration)

In this menu, the operator could set parameters of compressor. Pressing the "#" button after the user go to the "Refrigeration" menu to enter it. To exit this menu or any of the functions or submenus within this menu, the "C" button should be pressed.

6.6.14.1 Door-Stop

Upon entering this function, the current running status of the compressor will be displayed as "ON" or "OFF". Note: when it is on the "OFF" state that means when the door is open, the compressor will go on running. Pressing "#" will allow to change the state, then press the "*" button to switch the on/off state.

At last the user should press "#" again to save the change. At any time, the function may be exited by pressing the "C" button.

6.6.14.2 Min Run

This function means that once the compressor starts, it should keep the running state for at least the time that be set. Press "#" and then new time can be input by the numeric keys. To save the time please press "#". Pressing "C" button before "#" will exit the function without saving.

6.6.14.3 Min Stop

This function means that once the compressor stops, it should keep the stopping state for at least the time that be set. Press "#" and then new time can be input by the numeric keys. To save the time please press "#". Pressing "C" button before "#" will exit the function without saving.

6.6.14.4 Alt Run

If this menu is entered, the display will read "hhHmm". Here "h.m" represents that when any of the sensor does not work or the communication between the main control and the refrigeration board is in disable state, refrigeration cycle must **run** for the time period which is set in this menu. Then the refrigeration cycle should **stop** at the "Stop Time". Press "#" and then new time can be input by the numeric keys. To store the time please press "#". Pressing the "C" button before "#" will exit the function without saving.

6.6.14.5 Alt Stop

If this menu is entered, the display will change to read "hhHmm". Here "h.m" represents that when any of the sensor does not work or the communication between the main control and the refrigeration board is in disable state, refrigeration cycle must **stop** for the time period which is set in this menu. Then the refrigeration cycle should **run** at the "Run Time". To store the time press "#". Pressing the "C" button before "#" will exit the function without saving.

6.6.15 Message Programming (POS)

This submenu allows the operator customize sales messages.

Upon entering this submenu the display will show machine's current state as "Display POS ON" or "Display POS OFF". Pressing "#" will allow to enter the edit mode, then press the "*" button to switch the on/off state. At last the user should press "#" again to save the conversion. At any time, the function can be exited by pressing the "C" button.

If this function is set to "OFF", when the door closed, it will display the setup cabinet and defrost temperatures and current cabinet and defrost temperatures. If this function is set to "ON", the operator could choose the content of the displays. The first one is "Enjoy A Snack Today! + date & time", the second one is "Enjoy A Snack Today! + cabinet temperature". Pressing "#" will enable to edit the display, then press the "*" button to switch. At last the user should press "#" again to save the conversion. At any time, the function may be exited by pressing the "C" button.

6.6.16 Diagnostics (Diagnose)

The Diagnostics menu item displays the current status of the controller and the peripherals. This menu can be entered by pressing "#" after the user has navigated to the menu item labeled "Diagnose".

The order of checking is the vending machine controller, the changer, the bill validator, and the card reader. The display will show in this order: "VMC", "Changer", "Validator", and "Reader". If there's no problems with the individual device then the relevant device name will be followed by "OK". If there's any problems, then the relevant device name will be followed by an error code.

A definition of all possible error codes is shown in the table below.

ERROR CODE	ERROR DESCRIPTION
VMC 1 Error	Undefined
VMC 2 Error	Too much time to complete vend. For an example, the display will show "VMC 2 Error" if any motor in the configuration exhibits this problem.
VMC 3 Error	Undefined
VMC 4 Error	Price Checksum error. The display would read "VMC 4 Error".
VMC 5 Error	Health guard operate. The display would read "VMC 5 Error".
VMC 6 Error	Communications fault between VMC and refrigeration unit control board.The display would read "VMC 6 Error".
VMC 7 Error	Undefined
VMC 8 Error	Eyes on the activated optical sensor are blocked.
VMC 9 Error	Selection was not detected by optical sensor and, as such, is considered sold out.
CHANGER Lost	Loss of changer communications or no changer. The display would show "CHANGER Lost".
VALIDATOR Lost	Loss of bill validator communications or no bill validator. The display would read "VALIDATOR Lost".
READER Lost	Loss of card reader communications or no card reader. The display would read "READER Lost".

6.6.17 Language of Display (Language)

This function allows the operator to choose a specific language in which sales mode message will be displayed. In the program there are English, Italian, Dutch, Spanish, French can be chose. Pressing "#" will allow to have the transition of language, then press the "*"button will switch. At last the user should press "#" again to save the conversion. At any time, the function can be exited by pressing the "C" button.

6.6.18 Decimal Place Setting (Decimal Places)

This function allows the operator to choose a specific decimal places that prices will be displayed. In the program there are 0, 1, 2, 3 can be chose. Pressing "#" will allow to change decimal places, then press the "*"button to switch. At last the user should press "#" again to save the conversion. At any time, the function can be exited by pressing the "C" button.

6.6.19 Call for Service (Service)

It allows the operator to set the phone number when the vending machine does not work and the customer has to call for service. Pressing "#" will allow to set the phone number, after finish it the user should press "#" again to save the change. At any time, the function may be exited by pressing the "C" button.

6.6.20 The Information of the Machine(Machine Info)

This function allows the operator to set the parameter of the machine. This function is started by pressing "#" after the user has navigated to this menu item.

6.6.20.1 Machine Serial

This function allows the operator to set the machine's serial. Upon entering this submenu the display will show "Ser". Pressing "#" will allow to set the serial by numeric key. After finish it the user should press "#" again to save the change. At any time, the function may be exited by pressing the "C" button.

6.6.20.2 Machine Model

This function allows the operator to set the parameter of machine model. Upon entering this submenu the display will show "Mod", Pressing "#" will allow to set the model by numeric key, after finish it the user should press "#" again to save the change. At any time, the function may be exited by pressing the "C" button.

6.6.20.3 Software Version

This function will show the software version number. The function may be exited by pressing the "C" button.

6.6.21 Factory Settings

This function allows the operator to reset the machine to factory defaults. Upon entering this menu the display will show "Warning:Continue To Fac Settings!". Pressing "#" will reset the machine to factory defaults. The function may be exited by pressing "C" button.

7.0 Cleaning

Unplug the machine from the power before any cleaning is carried out.

7.1 Outside Cabinet

Use a soft damp cloth with a mild detergent.

Do not use a jet or water hose to clean the machine. Do not allow water to enter the cabinet.

A propriety glass cleaner can be used on the window. Avoid using highly perfumed products.

7.2 Inside Cabinet

Wipe cabinet and dispensing trays with a damp cloth at least once every week.

Remove all products from trays before cleaning.

Do not use a damp cloth to wipe any cables or connectors.

Use only a DRY cloth for this.

Do not use a perfumed cleaning product as this may taint any snack items.

If any tray or storage drawer requires deep cleaning, remove the tray/drawer from the machine to clean. DO not immerse any tray in water. Do not allow water to touch motors. Ensure that tray is completely dry before re fitting.

8.0 Maintenance

Disconnect the machine from the power before any maintenance is carried out.

Only qualified personnel should carry out maintenance tasks.

If the mains cable requires replacing this must be carried out by the machine manufacturers, its agents or a qualified engineer.

Any damage to internal wiring must be repaired by a qualified engineer.

Do not remove any panel, screws fixing covers or panels. Any repairs must be carried out only by qualified persons.

9.0 Noise

This machine has a continuously running fan within. It also has an intermittent

running refrigeration system. The noise level from this machine under normal working conditions is slight. Any loud or persistence noise or vibration should be reported to the service providers as this could be a symptom of a fault. Air noise rating for this machine is 60dB.

10.0 Restrictions of Use

This version has an IP24 rating and can be used indoor and outdoors within an ambient temperature range of 0°C ~ 40 °C.

NOTE: Use correct outdoor mains connector if the machine is to be used outdoors.

This machine is NOT intended for dispensing dairy products, or any perishable goods, see section 11.0

11.0 Important Safeguards

When using or maintaining electrical appliances, basic safety precautions should always be practiced including the following:

If the supply cord, lamp or leads are damaged, these must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. The plug must be inserted into the correct earthed socket-outlet.

The appliance is not intended for dispensing the following food:

- milk, eggs, meat, poultry, shellfish, crustacean, and their products, either raw or heat treated, as well as food of plant origin that is ready for consumption without the need for any further preparation or processing.
- powdered ingredients are mixed with water or food is required to be stored at correct temperature.
- dairy products, or any perishable goods.
- any potentially hazardous food such as food with a capability for supporting rapid and progressive growth of pathogenic or toxin producing micro-organisms;
- food having a pH level of not greater than 4,6 or a water activity (Aw) value not greater than 0,85 at 25°C;
- food maintained at a temperature not exceeding 5°C for periods specified by the producer, but for not more than 5 days;

-food maintained at a temperature above 65°C or below -18°C;

Food for which the appliance is suitable:

- candy, nuts, gum and similar confectionery;
- cookies, crackers and similar bakery products;
- instant-coffee, chocolate, cocoa and sugar;
- food in hermetically sealed containers;
- food that has been processed to prevent spoilage.

This appliance is not suitable for installation in an area where a water jet could be used.

The appliance has to be placed in a horizontal position.

Do not clean internal wirings using water or damp cloth. Do not pull or push the internal wiring with excessive force during maintenance or cleaning. If internal wiring is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

To open the door to gain access to the **maintenance area** . Access key should be kept by qualified and trained maintenance person. Before open the door, Switch off unit and unplug the appliance from the outlet. Do not intend to loosen the screws in the unit and gain access to service area for maintenance person. The **service area** is restricted to persons having knowledge and practical experience of the appliance in particular as far as safety and hygiene are concerned.

The unit is only available for food stored in the temperature of less than 25°C before each loading the clean, check carefully the food and its package and ensure the food is within best before date and well packaged.

**To wear disinfectant gloves and clothing when loading and cleaning.
Wear protecting hair covering to contain hair.**

CONTROL SYSTEM TROUBLE SHOOTING

No.	Symptom	Possible Cause	Remedy
1	No power supply to the control board.	1.The machine is not connected to the power.	Connect the machine to the power.
		2.Control loop fuse (3A) burned.	Replace fuse.
		3.Poor contact at the fuse in the fuse holder.	Fix the fuse connection.
		4.No output to the power switch.	Replace power switch.
		5.Open on the power transmission wire to the control board.	Check and reconnect.
		6.No output to the filter.	Replace filter.
		7.Circuit breaker's power cable is loose.	Check and reconnect.
2	The display shows "Make Alternate Selection" .	1.Motor fault.	Repair or replace the motor.
		2.Product drops but not be detected.	Check drop sensor fault or main control board fault.
		3.Price is not set. (not in free vend mode).	Set price.
		4.The selection number does not exist.	Make a correct selection.
		5.The selection is forbidden when health guard is on.	Normal protection. Reset if necessary.
3	Selected product does not drop, while the corresponding amount is deducted.	1.Sensor mode is off.	Set sensor mode to HOME or DROP.
		2.Vend failed for 3 continuous times before.	Open the door to let it restore.
		3.Sensor fault.	Replace sensor.
		4.Main control board fault.	Replace main control board.
4	Selected product drops, while the corresponding amount is not deducted.	1.Sensor fault or sensor is too dirty.	Replace or clean the sensor.
		2.Main control board fault.	Replace main control board.
		3.Machine is in free vend mode.	Turn off free vend mode.
		4.Loose connection between delivery sensor and main control board.	Check and reconnect.
5	Vendor does not accept any coins.	1.Price is not set. (Price is 0 for all selections.	Set prices correctly.
		2.All motors do not exist or all motors are not suitable to vend (ERROR or NULL).	Install motors.
		3.The door is open. (If the door is closed, maybe there is poor contact or fault in door switch.)	Close the door. (Check and replace door switch.)
		4.The machine is in service mode.	Exit the service mode.
		5.Communication problems between main control system and coin mech.	Check the communication wire.
		6.No power supply to the coin mech.	Turn off the machine and plug the coin mech.
		7.Coin mech. is not level.	Check and adjust the coin mech. to level.
		8.The refund pole is pressed.	Adjust the refund pole.

CONTROL SYSTEM TROUBLE SHOOTING

No.	Symptom	Possible Cause	Remedy
5	Vendor does not accept any coins.	9.The receive channel jammed or have rubbish in the coin mech.	Shut off the power, check if the receive channel jam, and clean the coin mech.
		10.The intake of the coin mech. and the coin slot of vendor are not on the line.	Check and readjust the coin mech.
		11.Coin incorrect.	Use the correct coin.
		12.Coin mech. or other M.D.B. devices fault. Display shows "call service" when standby.	Repair or replace coin mech. or other M.D.B. devices.
		13.Machine is in free vend mode.	Turn off free vend mode.
6	Vendor does not accept certain domination coins.	1.Certain domination coins are not set to be accepted.	Contact coin mech. manufacturer to add the domination in the program.
		2.Coin mech. fault.	Replace coin mech.
		3. The amount of coins accepted exceeds the max. Price. (The max. price is different in multiple vending mode)	Normal case. Select products.
		4.Lack of changes in coin tubes.	Fill in enough coins.
7	Accept coins, but not display the correct value.	1.The coin mech. jammed with coins.	Shut off the power and check if the coin mech. is jammed.
		2.Coin mech. setting problem.	Contact coin mech. manufacturer to modify the setting.
		3.The main control board fault.	Replace the main control board.
8	Wrong change or no change after successful vend.	1.Machine does not connect to the coin mech.	Shut off the power, and check if the coin mech. connects correctly.
		2.No enough coins in the tube.	Fill in enough coins.
		3.The refund channel of the coin mech. jammed.	Clean up the refund channel.
		4.Coin mech. fault.	Replace coin mech.
		5.Main control board fault.	Replace main control board.
9	Vendor does not accept any bills.	1.Machine does not connect to the coin mech.	Shut off the power, and check if the coin mech. connects correctly.
		2.No enough coins in the tube.	Fill in enough coins.
		3.The bill validator is not recognized by control system.	Replace the bill validator with a correct one.
		4.Bill receive switch is wrong in the bill validator.	Reset bill receive switch.
		5.The bill box is open or there are sundries.	Close the bill box or remove the sundries.
		6.Bill validator fault.	Check and replace the bill validator.
		7.Machine is in free vend mode.	Turn off free vend mode.
10	Vendor does not accept certain domination bills.	1.Certain domination coins are not set to be accepted.	Contact bill validator manufacturer to add the domination in the program.
		2.Bill validator fault.	Replace validator fault.

CONTROL SYSTEM TROUBLE SHOOTING

No.	Symptom	Possible Cause	Remedy
10	Vendor does not accept certain domination bills.	3. The amount of bills accepted exceeds the max. Price. (The max. price is different in multiple vending mode)	Normal case. Select products.
11	Specific trays do not vend after the vendor accepts money even there are goods in it.	1. Not enough money inserted.	Insert enough money or choose another cheaper product.
		2. Motors jammed or its circuit breaks off.	Check the motors and their wires.
		3. The selection is forbidden.	Reset in the "Health Guard" menu.
		4. Connection fault between motors and the main control board.	Check the circuit, and adjust wires.
		5. Main control board fault.	Replace main control board.
		6. Forbidden vending for not detect the goods last time.	Select the motors and make sure every motor turns to "OK" under the "SINGLE SELECTION" OR "ALL SELECTIONS" mode.
12	Multi-goods drop in once vend.	1. Multi-goods drop from single selection: The detecting sensor fault or its circuit breaks off when the sensor under the "HOME" mode.	Check and repair the wire of detecting sensor or replace the detecting sensor, if possible, change the sensor mode to "DISABLED".
		2. The motor switch short.	Replace the motor module.
		3. Multi-goods drop from different selections: The main control board fault.	Check and repair the main control board.
13	Goods vended not match with that be chosen.	1. Connection fault between motors and the main control board.	Check the circuit, and adjust wires.
		2. Main control board fault.	Replace main control board.
14	Free vend.	1. Machine is in free vend mode.	Turn off the free vend mode.
		2. Main control board fault.	Replace main control board.
15	Can't record the time and temperature when set.	1. Communication fault between the main board and chill control board.	Check the communication wire.
		2. Main control board fault.	Replace main control board.
16	Lamp off	1. No power.	Check the fuse and the power circuit.
		1. Lighting system (LED driver) Fault.	Replace the LED driver.
		3. Beyond the pre-set activation time.	In the service mode, set the correct activation time of the lamp.
		4. Clock chip fault in main control board.	Replace main control board.
		5. Lighting control relay fault in chill board.	Replace the chill control board.
		6. Bad connection of wires.	Check and re connect the wires.

END